

TURNTABLE REPACKING GUIDE (v2)



ELECTRONICS


1 REMOVE THE FOLLOWING ITEMS:

- Platter and platter belt
- Cables
- Counterweight
- Anti-skate weight


! Please use all of the original packaging

! Wrap dustcover with supplied plastic bag before packing the box


2 PREPARE FOR SHIPPING

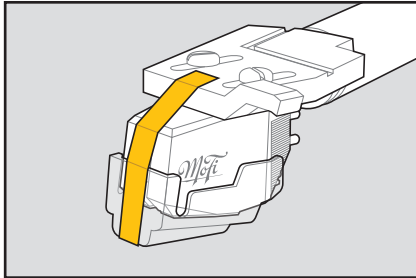


Install the cartridge stylus guard and use a small piece of masking tape to hold it in place.

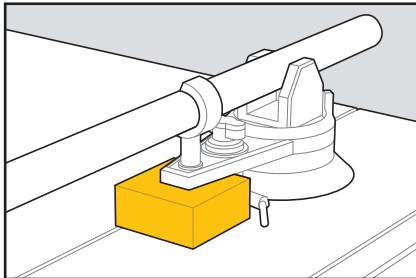

Place small foam block underneath the tonearm platform for support.

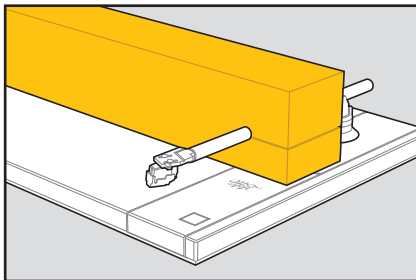


Secure tonearm with supplied foam stabilizer block. Then wrap unit with supplied plastic bag.

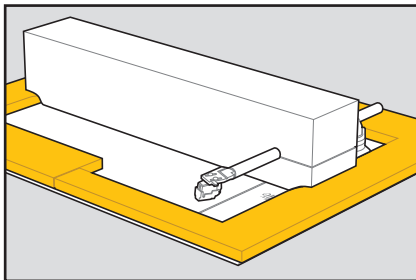

Place periphery foam strip across the top of the turntable plinth. This should have a snug fit against the foam block supporting the tonearm.

3 PACK THE BOX

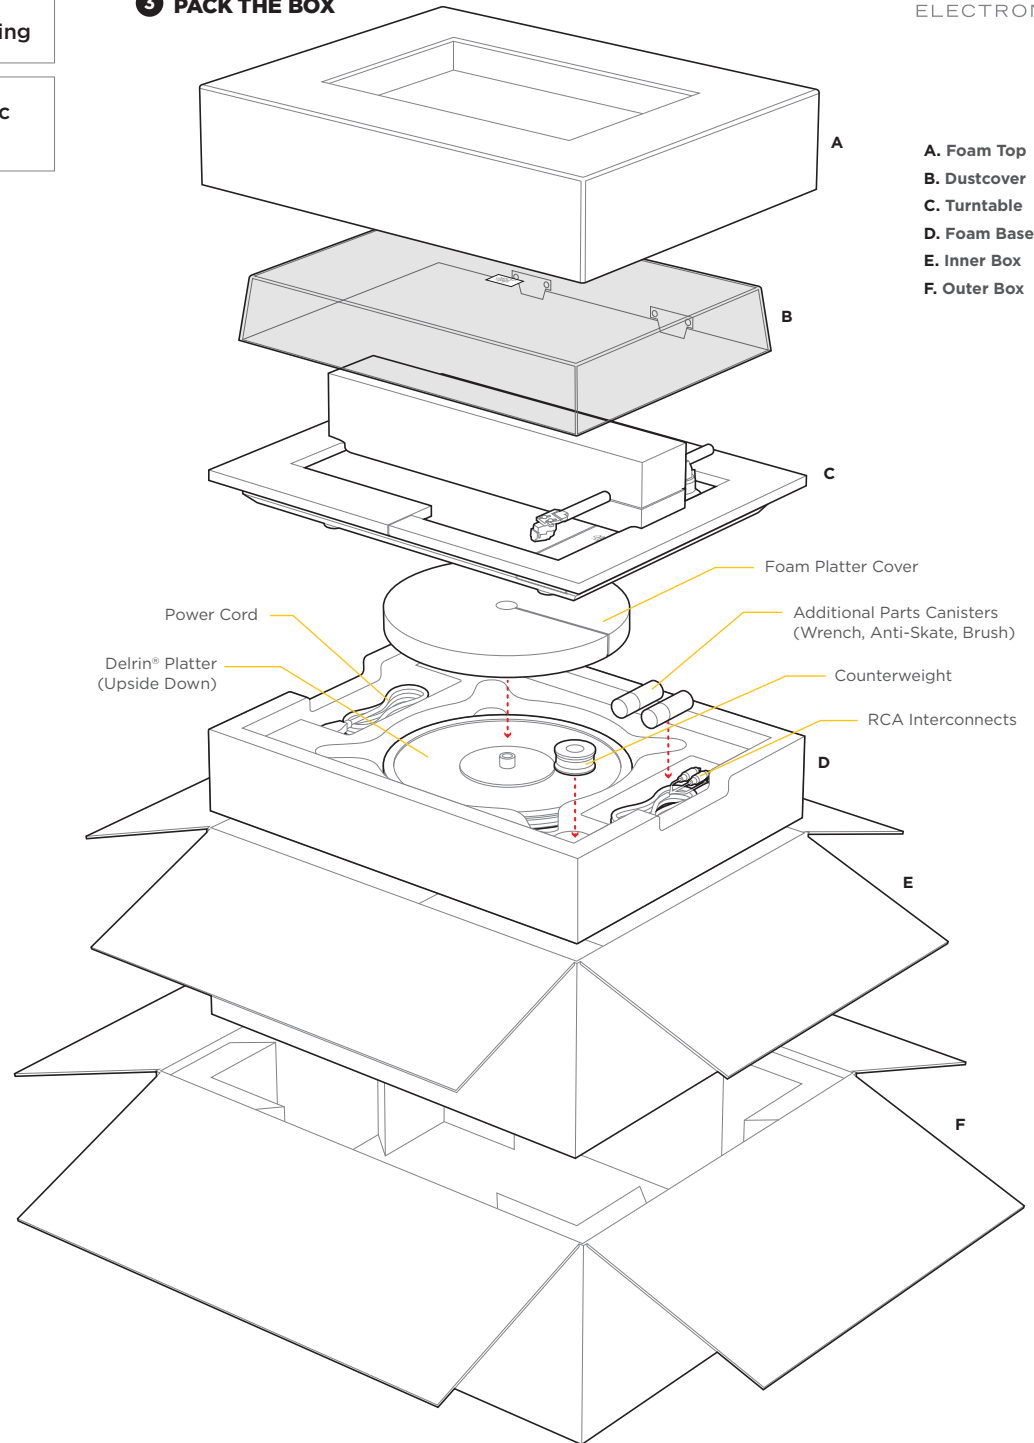

- A. Foam Top
- B. Dustcover
- C. Turntable
- D. Foam Base
- E. Inner Box
- F. Outer Box