

TURNTABLE REPACKING GUIDE (v1)

MoFi

ELECTRONICS


1 REMOVE THE FOLLOWING ITEMS:

- Platter and platter belt
- Cables
- Counterweight
- Anti-skate weight


❗ Please use all of the original packaging

❗ Use painter's tape to prepare for shipping (not packing or electrical tape)


2 PREPARE FOR SHIPPING

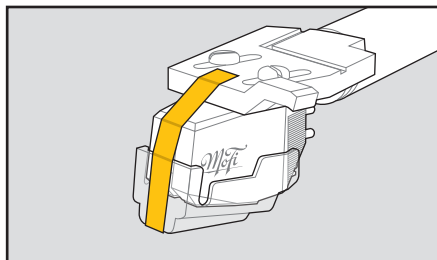


Install the cartridge stylus guard and use a small piece of tape to hold it in place.

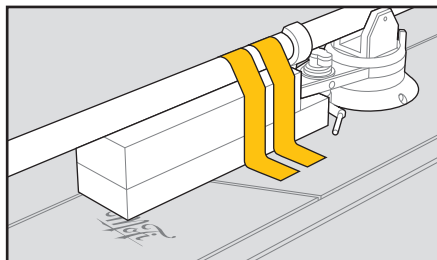

Secure tonearm with twist tie. Support tonearm base with foam blocks. Attach two strips of tape across top of tonearm over foam blocks and onto the top of turntable.

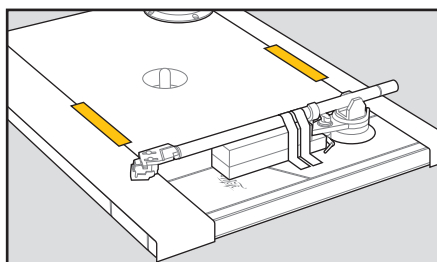

Attach two foam strips across the front and back of turntable.

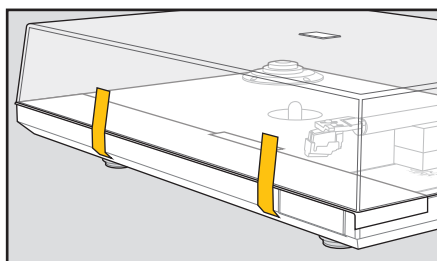

Insert dustcover hinges fully, then use tape to secure the dustcover to the body of the turntable so it cannot open.

3 PACK THE BOX

