
 
TURNTABLE REPACKING GUIDE (V 2)

1 REMOVE THE FOLLOWING ITEMS:

- Platter and platter belt
- Cables
- Counterweight
- Anti-skate weight

2 PREPARE FOR SHIPPING

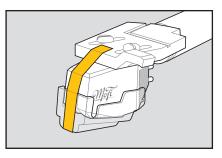




Install the cartridge stylus guard and use a small piece of masking tape to hold it in place.





Secure tonearm with supplied foam stabilizer block. Then wrap unit with supplied plastic bag.

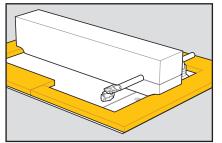

Place periphery foam strip across the top of the turntable plinth. This should have a snug fit against the foam block supporting the tonearm.

