

Using a second zone



For each input the **ZONE 2 SETTINGS** menu allows you to specify an analogue audio input and an S-Video or composite video input to be output to the Zone 2 outputs.

Option	Description
INPUT	Select one of the 15 inputs to be configured.
AUDIO VIDEO	Allows you to specify an analogue audio input and an S-Video or composite video input to be output to the Zone 2 outputs.
VOLUME	Allows you to set the current Zone 2 volume (0 to 99).
VOLUME DEFAULT	Determines the default Zone 2 volume (0 to 99) when the SPA22 is turned on from standby.

Note: Analogue inputs 9 and 10 cannot simultaneously be used for the main and Zone 2 sources.

ZONE 2

INPUT	1
AUDIO	NONE
TRIGGER 1	OFF
TRIGGER 2	OFF
TRIGGER 3	OFF
VOLUME	10
VOLUME DEFAULT	10

For each input the **ZONE 2 SETTINGS** menu allows you to specify an analogue audio input to be output to the Zone 2 output.

Option	Description
INPUT	Select one of the 15 inputs to be configured.
AUDIO	Allows you to specify an analogue audio input to be output to the Zone 2 output.
TRIGGER 1-3	Zone 2 trigger settings; see <i>Trigger settings</i> on this page.
VOLUME	Allows you to set the current Zone 2 volume (0 to 99).
VOLUME DEFAULT	Determines the default Zone 2 volume (0 to 99) when the SPA23 is turned on from standby.