

# SIGHT SOUND SOUL



## PRIMARE C22 USER GUIDE

Copyright © 2008 Primare AB.  
All rights reserved.

Primare AB  
Renvägen 1  
SE-352 45 Växjö  
Sweden

<http://www.primare.net>

Issue: C22/2

The information in this guide is believed to be correct as of the date of publication. However, our policy is one of continuous development and so the information is subject to change without notice, and does not represent a commitment on the part of Primare AB.

Primare is a trademark of Primare AB.

200419

Welcome to the Primare C22 Remote Control. This booklet explains how to use the C22 to operate the units in your Primare system.

## About the C22 Remote Control


The elegant C22 Remote Control allows you to operate most Primare products with a set of simple and logical push button controls. If the C22 did not come with your Primare unit, it can be purchased separately.

## Ergonomic design

The C22 is designed to be very comfortable to hold, and its weight makes it easy to balance in the palm of a hand while operating the controls. Its durable construction ensures that it will continue to operate perfectly for many years to come.

# Control Primare units

The C22 allows you to control most of your Primare units with the same remote control.

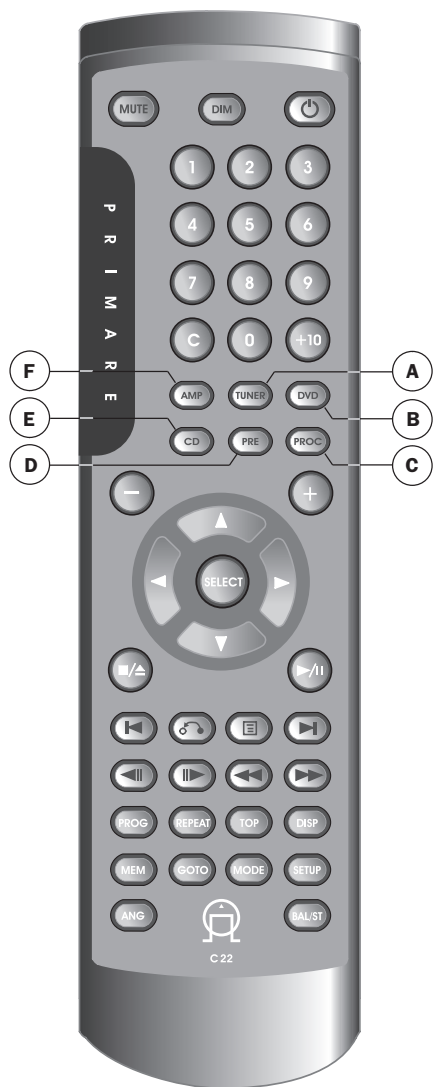

The six control buttons correspond to each unit:

Key	Description
A	Stereo tuner
B	DVD player
C	Surround processor
D	Preamplifier
E	Integrated CD player
F	Integrated amplifier

Press the appropriate control button to specify which unit you want to control, then press the required function buttons.

## Changing the batteries

Note: The batteries should be replaced with two alkaline type AAA 1.5 V batteries.

To do this proceed as follows:

- Gently slide open the battery panel.
- Remove the two batteries from the battery compartment and replace with two alkaline type AAA 1.5 V batteries.


Ensure that you fit them with the correct polarity, as marked on the inside of the battery compartment.

Please be considerate to the environment when disposing of the old batteries.

- Replace the battery panel.

# Operating a Primare amplifier


This section explains how to use the C22 Remote Control to operate a Primare integrated amplifier.

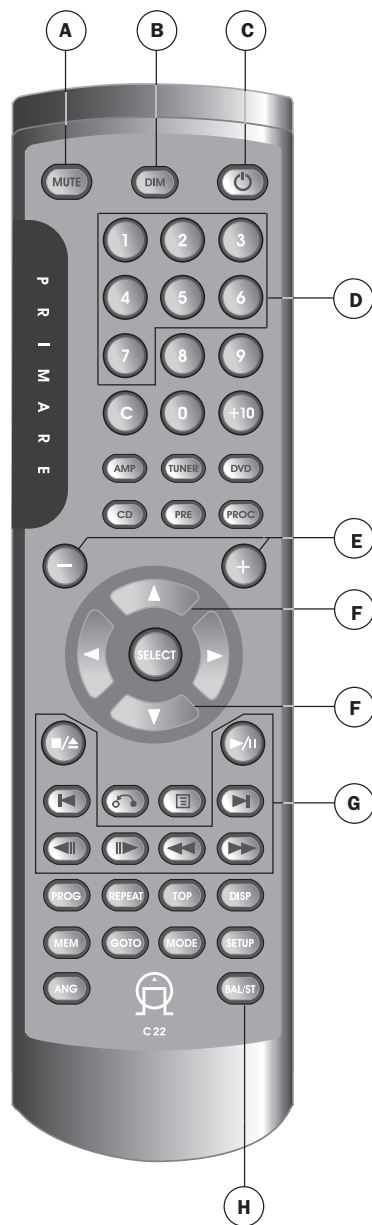

Key	Description
A	Mutes the sound on the selected unit
B	Dims the front panel display. Press again to restore the display
C	Switches the selected unit on or to standby
D	Selects an input source
E	Changes the volume
F	Changes the input source
G	Operates the last CD or DVD player you selected
H	Adjusts the balance between left and right

# Operating a Primare tuner


This section explains how to use the C22 Remote Control to operate a Primare stereo tuner.

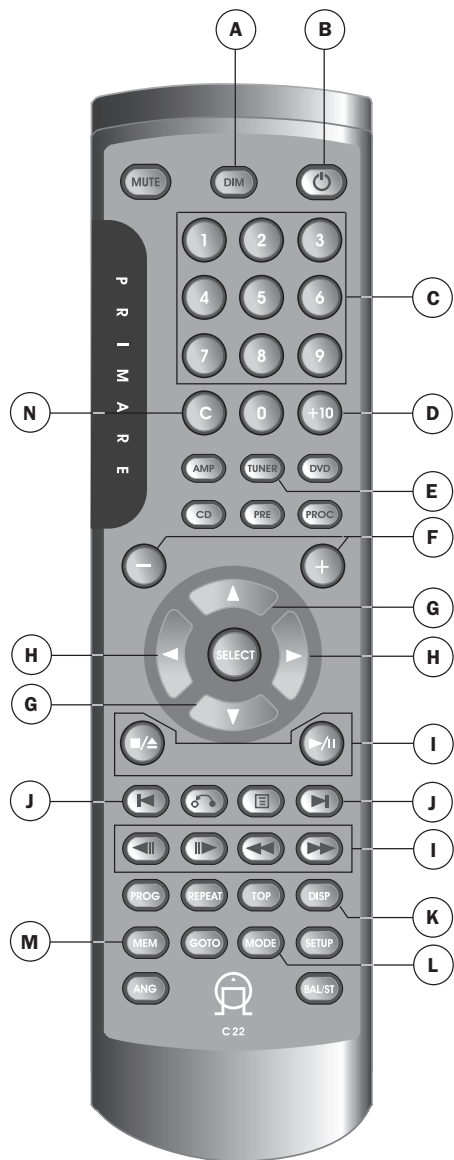

Key	Description
A	Dims the front panel display. Press again to restore the display
B	Switches the selected unit on or to standby
C	Enters a preset number
D	Enters a number > 10
E	Switches between FM and DAB
F	Changes volume of amplifier/processor
G	Steps between presets
H	Searches for next station (DAB). Tunes manually (FM)
I	Operates the last CD or DVD player you selected
J	Searches for next station (FM)
K	Changes the display option
L	Selects tune mode (DAB). Switches between Auto/Mono (FM)
M	Stores a station to a preset
N	Clears a preset (hold down)

# Operating a Primare DVD player


This section explains how to use the C22 Remote Control to operate a Primare DVD player.

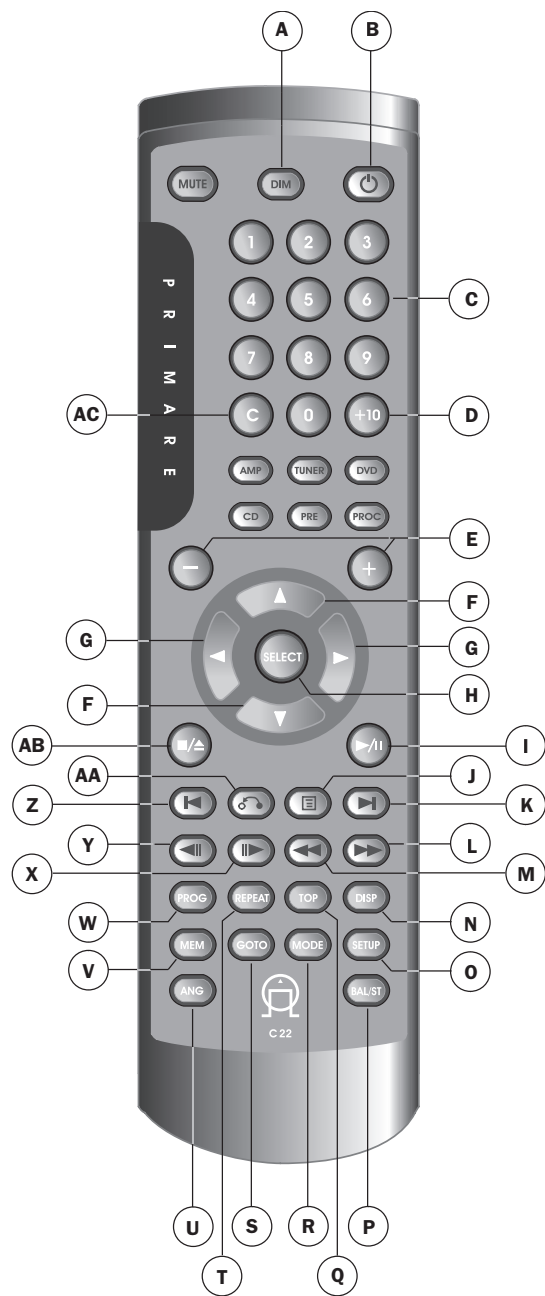

Key	Description
A	Dims the front panel display. Press again to restore the display.
B	Switches the selected unit on or to standby
C	Selects a specific track
D	Selects a numbered menu option 10 and over. (For example, for 24, press +10, +10 and 4.)
E	Changes the volume of the last used option: PROC, PRE or AMP
F	Moves the cursor up/down to highlight an option
G	Goes back/forward to the last/next question
H	Selects the highlighted option
I	Starts playing a disc. When pressed (long press) during play, the disc is paused
J	Shows the DVD menu on screen
K	Skips to the next track or chapter
L	Scans forward. Press once to scan forward. Press again to increase the scan speed. Press "I" to resume playback.
M	Scans reverse. Press again to increase the scan speed. Press "I" to resume normal playback.
N	Displays disc information
O	Shows the setup menu on screen
P	Changes subtitles
Q	Shows the DVD top menu on screen
R	Switches audio language
S	Goes to a specific track
T	Repeats a chapter/title/disc
U	Switches camera angle
V	Memorises disc settings
W	Makes a program list
X	Slow motion forward
Y	Slow motion reverse
Z	Skips to the start of the current track or chapter, then to previous track/chapters
AA	Returns to the previous step in the menu
AB	A short press stops the playback. A long press opens/closes the disc tray.
AC	Clears number

# Operating a Primare CD player


This section explains how to use the C22 Remote Control to operate a Primare integrated CD player.

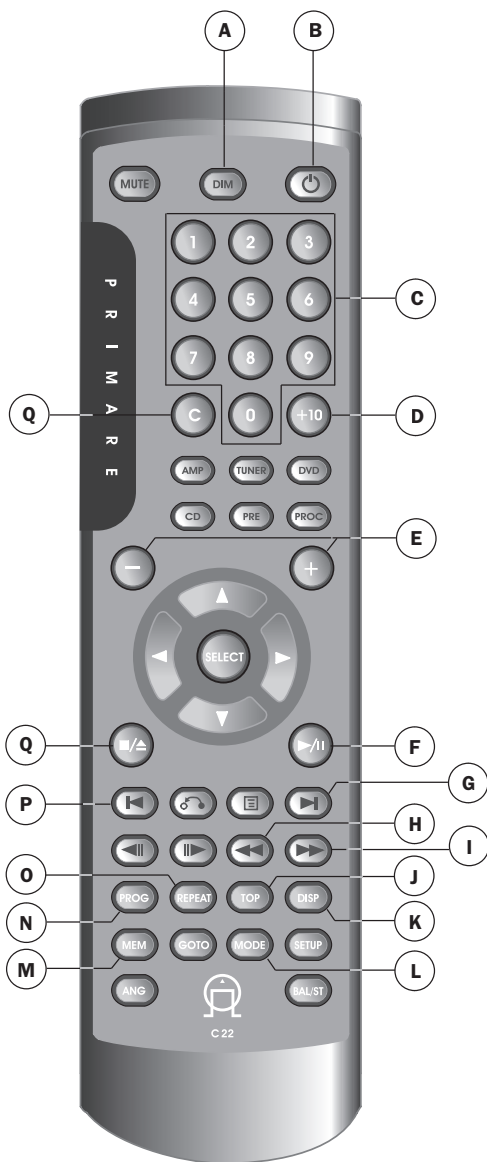

Key	Description
A	Dims the front panel display. Press again to restore the display
B	Switches the selected unit on or to standby
C	Selects a specific track
D	Selects a track over 9. (For example, for 24, press +10, +2 and 4.)
E	Changes the volume for the last used mode: PRE, PROC or AMP
F	Starts playing a disc. When pressed during play, the disc is paused
G	Skips to the next track or chapter
H	Scans reverse. Press and hold. Returns to normal playback when released
I	Scans forward. Press and hold. Returns to normal playback when released
J	Uses A-B repeat
K	Changes the information shown in the display
L	Plays the tracks randomly
M	Enters program mode
N	Plays program
O	Uses repeat play
P	Skips to the start of the current track or chapter, then to previous track/chapters
Q	A short press stops the playback A long press opens/closes the disc tray
R	Deletes a programmed track

# Operating a Primare preamplifier

This section explains how to use the C22 Remote Control to operate a Primare preamplifier.

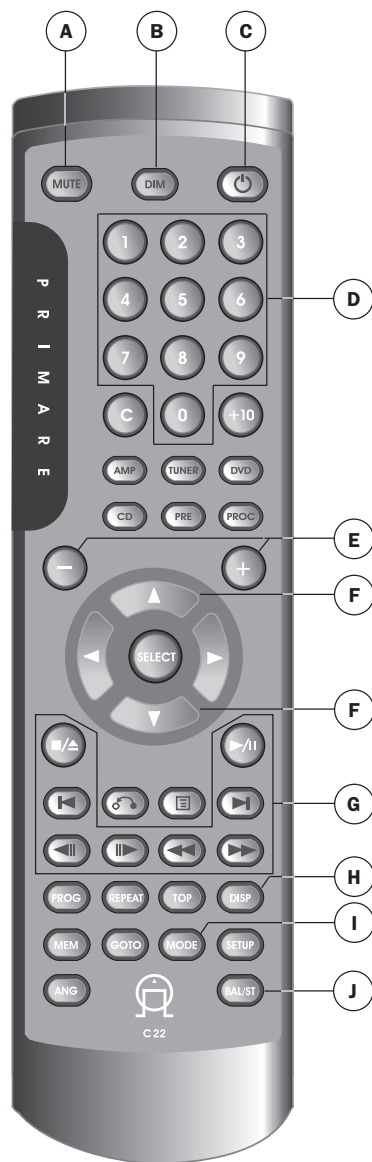


Key	Description
A	Mutes the sound on the selected unit
B	Dims the front panel display. Press again to restore the display.
C	Switches the selected unit on or to standby (PRE30)
D	Selects an input source
E	Changes the volume. Switches the PRE30 on when in standby.
F	Changes the input sources. Switches the PRE30 on when in standby.
G	Operates the last CD or DVD player you selected
H	Allows you to individually adjust the level on the different inputs
I	Puts the unit into Surround mode
J	Allows you to adjust the LEFT and RIGHT balance



# Operating a Primare processor

This section explains how to use the C22 Remote Control to operate a Primare surround processor.

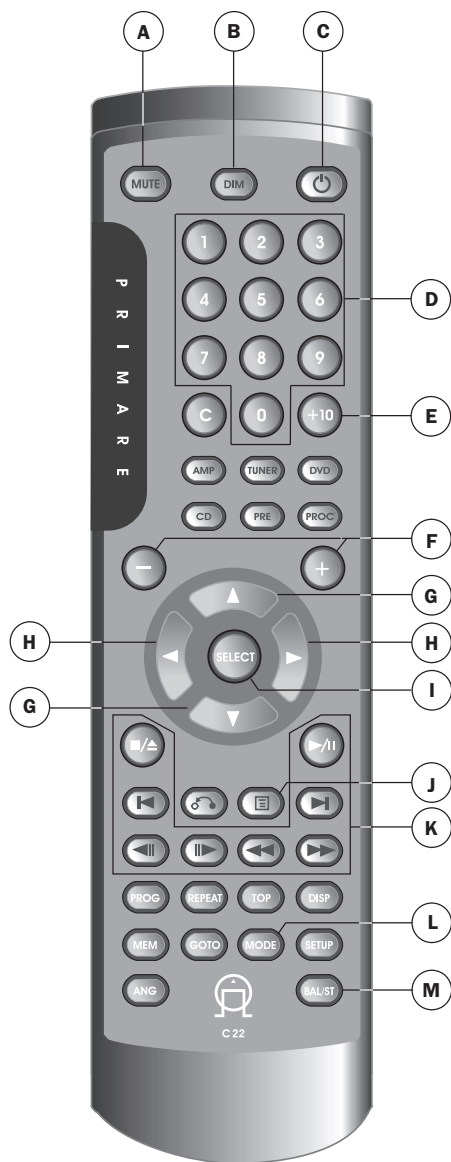

Key	Description
A	Mutes the sound on the selected unit
B	Dims the front panel display. Press again to restore the display
C	Switches the selected unit on or to standby
D	Selects an input
E	Selects an input 10 and over
F	Changes the volume
G	Changes the input sources and moves the cursor in the OSD
H	Changes the volume and moves the cursor in the OSD
I	Selects the highlighted option
J	Displays the on-screen display
K	Operates the last CD or DVD player you selected
L	Selects different surround modes
M	Toggles between adjusting: Balance, Center level, Surround level, Back level, Sub level and Master volume

Primare AB :: Renvägen 1  
:: SE-352 45 Växjö :: Sweden  
W W W . P R I M A R E . N E T

P R I M A R E

